Installations- / Monitoring Technique

VARIMETER RCM

Residual Current Monitor, Type B for AC and DC Systems RN 5883




Product Description

The AC/DC sensitive residual current monitor RN 5883 allows an early detection of insulation faults and detects differential currents with AC as well as DC components in grounded voltage systems (type B). The measurement takes place via an external current transformer.

Contrary to an RCD the residual current monitor RN 5883 does not disconnect the mains when detecting a fault but only indicates it. Besides the easy to read LED chain indicating the actual current several LEDs display operation, pre-alarm and alarm. The 4 measuring ranges cover 10 to 3 A. Additional features are broken wire detection, test function and adjustable pre-alarm.

The residual current monitor RN 5883 provides early information for precise and cost effective maintenance before the plant stops.

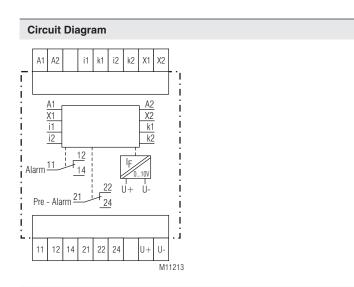

| Connection Terminals | |
|-----------------------------|---|
| Terminal designation | Signal description |
| A1, A2 | Auxiliary voltage U _H |
| i1, k1, i2, k2 | Connection of an external residual current transformer |
| X1, X2 | Parameterization input energized or de-energized on trip |
| 11, 12, 14 | Contacts alarm signal |
| 21, 22, 24 | Contacts pre-alarm signal |
| U-, U+ | Analogue output (option) |

Translation of the original instructions



Your Advantage

- Preventive fire and system protection
- Increasing the availability of plants by early fault detection
- Universal usage at AC/DC mains
- Protection against manipulation by sealable transparent cover over setting switches

Features

- According to IEC/EN 62020, VDE 0663
- For AC and DC systems Type B
- To detect earth faults in grounded voltage systems
- 4 setting ranges from 10 mA to 3 A
- Manual reset, with alarm and pre-warning
- With adjustable switching delay
- Energized or de-energized on trip LED indicator for operation, pre-alarm and alarm
- With test function
- LED-chain indicates fault current
- As option with analogue output
- Broken wire detection
- Width: 52.5 mm

Approvals and Markings



1) RN 5883 Variant /61; 2) ND 5015

Application

The residual current monitor type B is designed to monitor DC systems and AC systems up to 250 Hz.

| Indication | | | | | | | |
|---|--|--|--|--|--|--|--|
| Green LED "ON": | On, when auxiliary supply connected | | | | | | |
| Yellow LED "Pre-Alarm": Flashes during time delay $t_{\rm v}$ On, when pre-alarm active | | | | | | | |
| Red LED "Alarm": | Flashes during time delay $t_{\!_{\nu}}$ On, when alarm active | | | | | | |
| Yellow and red LED: | Flashes on broken wire or extremely high input signal | | | | | | |
| Yellow LED-chain: | LED chain indicates fault current in % of adjusted alarm value | | | | | | |


Notes

1

The devices measure AC and DC current (AC / DC sensitive. Due to the measurement principle they also detect magnetic fields in the next to the current transformer.

When planning a panel with AC/DC sensitive residual current monitors please make sure that no components are placed next to the CT that create a magnetic field, e.g. contactors, transformers etc.

If an influence is detected, also a rotation of the CT by 90° could positively reduce the influence.

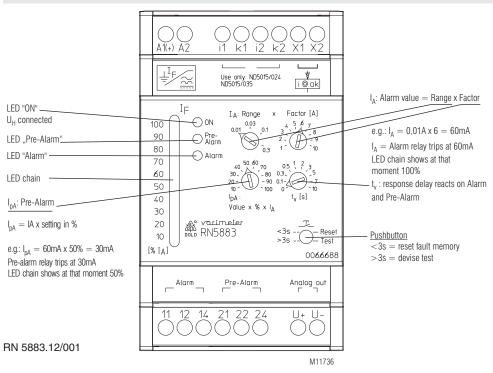

It is of advantage to keep the range small and the Factor high. Example: Setting 300 mA: Range 0,1 x Factor 3 = 300 mA

Function

The Measuring circuit includes an external residual current transformer. All conductors of a voltage system are fed through the transformer except the ground wire. In a healthy system the sum of all flowing currents is zero, so that no voltage is induced in the CT. If an earth fault occurs, sourcing a current flowing to ground, the current difference induces a current in the CT that is detected by the RN 5883.

If an earth fault occurs, sourcing a current flowing to ground, the current difference induces a current in the CT that is detected by the RP 5883.

On broken sensor wires and broken CT coils the unit goes into alarm state and the LEDs for pre-alarm (yellow) and alarm (red) flashes.

The unit has 2 changeover output contacts. One for alarm 11, 12, 14 and 21, 22, 24 and one for pre-alarm.

4 Setting Ranges can be slected from 10 mA to 3 A. The fine adjustment is made via potentiometer "Factor" $\,$

Measuring range = Range x Factor.

The alarm relay switches at 100 % of the adjusted response value.

The pre-alarm can be set in 10% steps between 10 and 100% of the alarm value.

Potentiometer $t_{_{\rm V}}$ sets the switching delay between 0 and 10 seconds. The delay reacts on pre-alarm and alarm.

The different CT sizes require a correct adaption of the residual current monitor. 3 models are available:

| Suitable residual current transformer | Frequeny range |
|---|---|
| ND 5015/024 ND 5015/035 | DC + AC up to 250 Hz |
| ND 5015/070 | DC + AC up to 180 Hz |
| ND 5018/105 ND 5018/140 ND 5018/210 | DC + AC up to 60 Hz |
| | residual current transformer ND 5015/024 ND 5015/035 ND 5015/070 ND 5018/105 |

Table 1

An external link on X1-X2 allows the change between energized and deenergized on trip. A change of the function will only be valid after interruption of the supply voltage.

| Terminal X1 / X2: | External link | = | De-energized on trip, |
|-------------------|---------------|---|-----------------------|
| | Open | = | Energized on trip |
| | | | |

| De-energized on trip | b: In the case of groundfault or missing auxiliary supply the relays are de-energized, the NC contacts 11/12; 21/22 are closed |
|----------------------|--|
| | In fault free state the relays are energized, the NO contacts 11/14; 21/24 are closed |
| Energized on trip: | In the case of groundfault the relays are energized, the NO contacts 11/14; 21/24 are closed |
| | In fault free state the relays are de-energized, the NC contacts 11/12; 21/22 are closed |

If an adjusted value is reached on the measuring input (alarm or prewarning)at the standard type RN 5883 the signal is stored. Reset is made by pressing the button "Test/Reset" for < 3 s s or by disconnecting the auxiliary supply (approx. 30 s).

If the "Test/Reset" button is pressed for > 3 s, a test of the unit is made. The time delays run, the pre-warning and alarm is activated.

An LED chain shows the fault current between 10 and 100 % of the adjusted alarm value.

An analogue output 0 \dots 10 V indicates also the fault current. 10 V corresponds to 100 % of the adjusted alarm value.

Input **FMC** Class 3 (5 kV / 0.5 J) DIN VDE 0435-303 Surge voltages: Auxiliary voltage U_H: AC/DC 24 ... 80 V, AC/DC 80 ... 230 V Electrostatic discharge: 8 kV (air) IEC/EN 61000-4-2 Voltage range HF irradiation At U_H = AC/DC 24 ... 80 V: DC 19 ... 110 V, AC 19 ... 90 V, 80 MHz ... 2,7 GHz: 20 V / m (class 3) IEC/EN 61000-4-3 At U_H = AC/DC 80 ... 230 V: DC 64 ... 300 V, AC 64 ... 265 V HF-wire guided: 10 V (class 3) IEC/EN 61000-4-6 Nominal frequency U_u: AC 50 / 60 Hz Fast transients: 2 kV (class 3) IEC/EN 61000-4-4 Nominal consumption 1 kV class 3) IEC/EN 61000-4-5 Surge voltages: At AC: 5 VA Interference suppression: Limit value class B EN 55011 At DC: 2.5 W **Degree of protection** Measuring range: 10 ... 100 mA, 30 ... 300 mA, Housing: IP 30 IEC/EN 60529 100 ... 1000 mA, 300 ... 3000 mA IP 20 Terminals: IEC/EN 60529 Measuring range Housing: Thermoplastic with V0-behaviour fine adjustment: 1 ... 10 according UL subject 94 Überlastbarkeit: With overload protection Vibration resistance: Amplitude 0.35 mm Alarm: 100 % of the adjusted measuring range frequency 10 ... 55 Hz IEC/EN 60068-2-6 Pre-alarm: 10. 20. 30. 40. 50. 60. 70. 80. 90. 100 % Climate resistance: 40 / 60 / 03 IEC/EN 60068-1 of the adjusted alarm value EN 50005 Terminal designation: Frequency range: DC and AC to 250 Hz*) Wire connection: DIN 46228-1/-2/-3/-4 *) depending on the differential current **Fixed screw terminals** transformer used. See "Function" Table 1. 0.5 ... 4 mm² (AWG 20 - 10) solid or Cross section: Repeat accuracy: < + 3 % 0.5 ... 4 mm² (AWG 20 - 10) \leq \pm 0.1 % / K **Temperature drift:** stranded wire without ferrules **Reaction time:** 300 ms 0.5 ... 2.5 mm² (AWG 20 - 10) Switching delay stranded wire with ferrules Pre-alarm / alarm: 0...10s Stripping length: 6.5 mm Wire fixing: Cross-head screw / M3 box terminals Output Fixing torque: 0.5 Nm Mounting: DIN rail IEC/EN 60715 Contacts: 1 changeover contact for pre-alarm, Weight: Approx. 160 g 1 changeover contact for alarm Thermal current I_{th} Dimensions Up to 30 °C: 5 A Up to 40 °C: 4 A Width x height x depth: 52.5 x 90 x 71 mm Up to 60 °C: 2 A Switching capacity UL-Data RN 5883 At AC 15: NO contact: 3 A / AC 230 V IEC/EN 60947-5-1 These devices only monitor residual currents and are not intended to NC contact: 1 A / AC 230 V IEC/EN 60947-5-1 be used as Ground Fault Circuit Interrupter (GFCI) in accordance with **Electrical life** UL1053 / UL943. To AC 15 at 1 A. AC 230 V: 3 x 10⁵ switch. cycl. IEC/EN 60947-5-1 Short circuit strength These devices have been investigated to be used with external differential Max. fuse rating: IEC/EN 60947-5-1 4 A aG / aL current transformers manufactured by E. Dold & Söhne GmbH & Co. KG, Mechanical life: $\geq 10^8$ switching cycles Cat. Nos. ND5015/024/61, ND5015/035/61 or ND5015/070/61. Analogue Output (option) Supply voltage U.: AC/DC 24-80V single or double phase 50/60 Hz: Terminal U+ / U-: 0 ... 10 V: 5 mA AC/DC 80-230V single or double phase variant RN 5883/__1 50/60 Hz Screened wire; screen one end grounded at device to PE Switching capacity relays Ambient temperature 30°C: 5A. 250Vac G.P. **General Data** 250 Vac, 2A pilot duty 250 Vac, 1/2hp **Operating mode:** Continuous **Temperature range** 4A, 250Vac G.P. Ambient temperature 40°C: Operation: - 40 ... + 60°C 250 Vac, 2A pilot duty - 20 ... + 60°C (variant /_1_ and /_2_) 250 Vac, 1/2hp Storage: - 40 ... + 70°C Altitude: < 2000 m Ambient temperature 60°C: 2A, 250Vac G.P. Insulation coordination according to IEC 60664-1: Analogue output RN 5883 cennected with (only at variant/__1): 0 .. 10V, 5mA current transformer ND 5015, ND 5018 Rated impuls voltage / Max. measuring frequency: DC, AC (0 - 250Hz) pollution degree: Wire connection: AWG 20 - 12 Auxiliary voltage / Meas. circuit: 6 kV / 2 60°C / 75°C copper conductors only Auxiliary voltage / Contacts: 6 kV / 2 Auxiliary voltage / Analoge output: 6 kV / 2 Technical data that is not stated in the UL-Data, can be found Contacts / Analoge output: 6 kV / 2 in the technical data section. Meas. circuit / Analoge output: 6 kV / 2

Technical Data

Technical Data

Contacts 11,12,14 / 21, 22, 24: 4 kV / 2

nfo

CCC-Data RN 5883

Insulation coordination according to IEC 60664-1: RN 5883 cennected with current transformer ND 5015, ND 5018 Rated impuls voltage / pollution degree: Auxiliary voltage / Meas. circuit: 4 kV / 2 Auxiliary voltage / Contacts: 4 kV / 2 Auxiliary voltage / Analoge output: 4 kV / 2 Contacts / Analoge output: 4 kV / 2 Meas. circuit / Analoge output: 4 kV / 2 Contacts 11,12,14 / 21, 22, 24: 4 kV / 2

Standard Type

RN 5883.12/61 AC/DC 80 ... 230 V 50 / 60 Hz 0066451 Article number:

- For residual current transformer ND 5015/024 and ND 5018/035
- Alarm und Pre-alarm
- Energized or de-energized on trip
- Without analogue output
- AC/DC 80 ... 230 V Auxiliary voltage U_µ: 52.5 mm
- Width:

ND 5015/035/61

Article number: 0066841

- Residual current transformer for RN 5883
- Diameter: 35 mm

Variants

For residual current transformer ND5015/024 und ND5015/035: RN 5883.12/001/61: With analogue output 0 ... 10 V

RN 5883.12/800/61: Fixed values, without analogue output

RN 5883.12/802/61: Fixed values, without analogue output; with bridge on X1/X2: - Alarm: Energized on trip - Pre-alarm: De-energized on trip without bridge: - Alarm: De-energized on trip - Pre-alarm: Energized on trip


For residual current transformer ND5015/070:

RN 5883.12/011/61: With analogue output 0 ... 10 V

For residual current transformer ND5018/105, ND5018/140, ND5018/210:

RN 5883.12/021: With analogue output 0 ... 10 V

Ordering example for variants

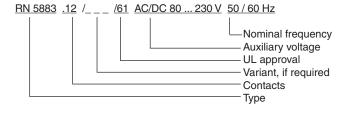

UL-Daten ND 5015

Wire connection:


AWG 24 - 16

nfo

60°C / 75°C copper conductors only Technical data that is not stated in the UL-Data, can be found in the technical data section.

Accessories

Residual Current Monitor ND 5015/024, ND 5015/035

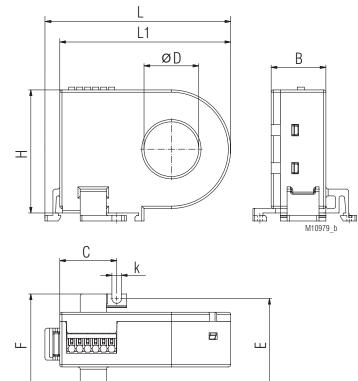

For DIN rail mounting or screw mounting

| ND 5015/024 | øD | L | L1 | В | Н | С | Е | F | k | | |
|---------------|------------|------------|----|----|----|----|-----|----|-----|--|--|
| Dimensions/mm | 24 | 82 | 75 | 24 | 54 | 25 | 42* | 46 | 4.2 | | |
| Weight / g | | approx. 80 | | | | | | | | | |
| | | | | | | | | | | | |
| ND 5015/035 | øD | L | L1 | В | Н | С | Е | F | k | | |
| Dimensions/mm | 35 | 88 | 81 | 24 | 67 | 25 | 42* | 46 | 4.2 | | |
| Weight / g | approx. 90 | | | | | | | | | | |


*) Drill tolerance for screw mounting: ± 0.5 mm


| Technical Data Residual Current Monitor ND 5015, ND 5018 | | | | | | | | | |
|---|--|---|--|--|--|--|--|--|--|
| Ambient tempera Inflammability cla | | - 40 + 60°C / 233 K 333 K V0 according to UL94 | | | | | | | |
| Insulation coordi | nation according | to IEC 61869-1 | | | | | | | |
| Highest rated oper Rated impulse volt | | AC 720 V 3 kV | | | | | | | |
| Length of connecti Type of wire to CT, Single wire: Single wire twisted Screened wire; scr Wire cross section Stripping length: | e.g. pair (pair 1: i1 - k een one end grou | Up to 1 m 1; pair 2: i2 - k2): Up to 10 m nded at device to PE: Up to 25 m 0.2 1.5 mm ² 8 mm | | | | | | | |
| ND 5015: Wire fixing: | T | erminals with spring connection and direct (Push in) technology | | | | | | | |
| Actuation power: DIN rail mounting: | | 40 N max. Integrated clips for vertical and horizontal mounting | | | | | | | |
| Screw fixing: Fixing torque: ND 5018: | | M3 or M4 Max. 0.8 Nm | | | | | | | |
| Wire fixing: DIN rail mounting: Screw fastening: | | ninals with self-lifting clamping piece Using mounting adapter ET 5018 105, ND 5018/140, ND 5018/210) M 5 | | | | | | | |


Accessories

Residual Current Monitor ND 5015/070


Residual Current Monitor ND 5018/105, ND 5018/140, ND 5018/210,

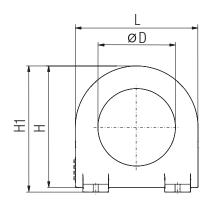


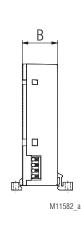

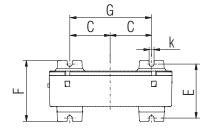

for DIN rail mounting or screw mounting

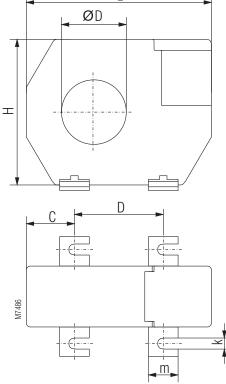

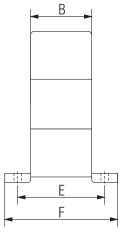

for screw mounting

| ND 5015/070 | øD | L | Н | H1 | В | С | F | k | E | G | ND 5018/105 | øD | L | В | Н | С | Ī |
|--------------------------------|-------------|------|--------|---------------------|--------|----|----|-----|------------|-----|---------------|-----|-----|----|-----|------|---|
| Dimensions/mm | 70 | 111 | 110 | 115 | 32 | 37 | 55 | 4,2 | 50* | 74* | Dimensions/mm | 105 | 170 | 33 | 146 | 38 | Ī |
| Weight / g | approx. 220 | | | | | | | | Weight / g | | | | | 53 | 3 | | |
| *) Drill tolerance fo | r ooro | w mo | unting | $\rightarrow \pm 0$ | Emm | | | | | | | | | | | | _ |
| ⁷ Dhii tolerance io | r scre | w mo | unung | J. ± 0. | 5 1111 | I | | | | | ND 5018/140 | øD | L | В | Н | С | I |
| | | | | | | | | | | | Dimensions/mm | 140 | 220 | 33 | 196 | 48.5 | T |

| ND 5018/140 | øD | L | В | Н | С | D | Е | F | k | m | |
|---------------|-----|------|----|-----|------|-----|----|----|-----|----|--|
| Dimensions/mm | 140 | 220 | 33 | 196 | 48.5 | 123 | 46 | 61 | 6.5 | 16 | |
| Weight / g | | 1250 | | | | | | | | | |
| | | | | | | | | | | | |
| ND 5018/210 | øD | L | В | н | С | D | Е | F | k | m | |
| Dimensions/mm | 210 | 299 | 33 | 284 | 69 | 161 | 46 | 61 | 6.5 | 16 | |
| Weight / g | | 2100 | | | | | | | | | |

D Е F k m

94 46 61 6.5 16

530

Mounting instructions for screw mounting

High forces when mounting may damage the current transformer fixtures. The fixing clips are designed to support the current transformer. Forces that are applied by the cable running through the current transformer can only be tolerated within limitations.


During installation and afterwards please make sure that the wires are led through the current transformer without applying pressure and remain stable in that position.


The residual current transformer ND 5018/105 can also be mounted on DIN-rail. To do this the metal screw fixings have to be removed and have to be replaced by 2 mounting clips

(ET5018: Art.no. 0058754; set with 2 pcs)


Accessories

Residual Current Monitor ND 5018/105

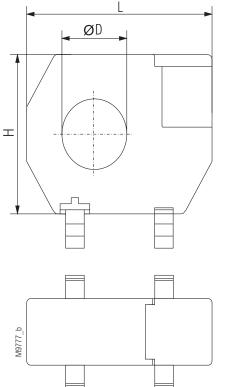


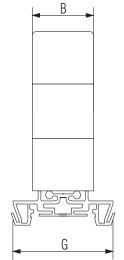

Disassembling Residual Current Monitor ND 5015/024 and /035

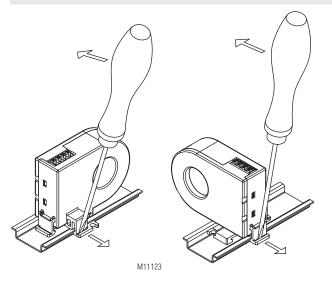


Disassembling Residual Current Monitor ND 5015/070

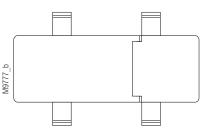


for DIN rail mounting

| ND 5018/105 | øD | L | В | Н | G | | | |
|---------------|-----|-----|----|-----|----|--|--|--|
| Dimensions/mm | 105 | 170 | 33 | 146 | 55 | | | |
| Weight / g | 530 | | | | | | | |

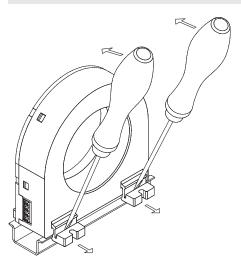


M11583

Installation of Wires

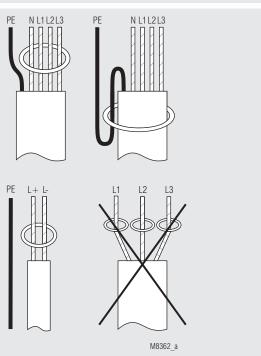

Connection Example

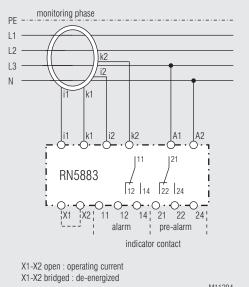



E. Dold & Söhne GmbH & Co. KG • D-78120 Furtwangen • Bregstraße 18 • Phone +49 7723 654-0 • Fax +49 7723 654356